



Conference Center Rigging Plan

1/8" = 1'-0"

Plan Notes

- ALL RIGGING LOADS MUST BE APPLIED TO THE BOTTOM CHORD OF ROOF TRUSSES.
- "BUILDING TRUSS 2: 2,000 LB/14,000 LB" INDICATES: NAME OF JOIST; MAX. POINT LOAD/MAX. TOTAL LOAD.
- EXTENDED RIGGING NOTES IN "TRUSS LOAD LIMITS".
- BOTTOM OF TRUSSES ARE 31'-1" ABOVE THE FLOOR WITH EXCEPTION OF SPECIAL LOADING A, B, AND E ARE 30'-1" ABOVE THE FLOOR.

Truss Load Limits

- BUILDING TRUSS 1: 2,000 LB MAX. POINT LOAD AT ANY PANEL POINT; TOTAL LOAD NOT TO EXCEED 7,300 LBS.
- BUILDING TRUSS 2: 1,500 LB MAX. POINT LOAD AT ANY PANEL POINT; TOTAL LOAD NOT TO EXCEED 4,000 LBS.
- BUILDING TRUSS 3: 450 LB MAX. POINT LOAD AT ANY PANEL POINT; TOTAL LOAD NOT TO EXCEED 1,000 LBS.
- BUILDING TRUSS 4: 2,000 LB MAX AT ANY PANEL POINT; TOTAL LOAD NOT TO EXCEED 7,500 LBS.
- BUILDING TRUSS 5: NO RIGGING ALLOWED
- BUILDING TRUSS 6: 750 LB MAX. POINT LOAD AT ANY PANEL POINT; TOTAL LOAD NOT TO EXCEED 2,000 LBS.
- SPECIAL LOADING A: 2,000 LB MAX. POINT LOAD ANYWHERE; TOTAL LOAD NOT TO EXCEED 8,000 LBS.
- SPECIAL LOADING B: 2,000 LB MAX. POINT LOAD ANYWHERE; TOTAL LOAD NOT TO EXCEED 14,000 LBS. ONLY WHEN PARTITION WALL IS STORED AND NOT IN USE.
- SPECIAL LOADING C: 2,000 LB MAX. POINT LOAD ANYWHERE; TOTAL LOAD NOT TO EXCEED 8,000 LBS.
- SPECIAL LOADING D: 2,000 LB MAX. POINT LOAD ANYWHERE ALONG THE AREA NOTED OR 4,000 LB IN INDICATED LOCATION; TOTAL LOAD NOT TO EXCEED 8,000 LBS.
- SPECIAL LOADING E: LOADS NOT TO EXCEED 2,000 LB MAY OCCUR AT PANEL POINTS ALONG BOTTOM CHORD; TOTAL LOAD NOT TO EXCEED 14,000 LBS. ONLY WHEN PARTITION WALL IS STORED AND NOT IN USE.
- LIGHT TRUSS: 2,000 LB MAX. POINT LOAD ANYWHERE; TOTAL LOAD NOT TO EXCEED 6,000 LBS.